


5 Secure the Font & attach the pipe (underneath)

- Secure the Font with mounting nuts and washers.
- Secure flexible drain pipe with a worm drive clamp. Ensure braided clear reinforced tubing is used.
- If required, use the elbow fitting (supplied) under the Font to prevent hose kinks.
- Maximum tube length should not exceed 1 metre.


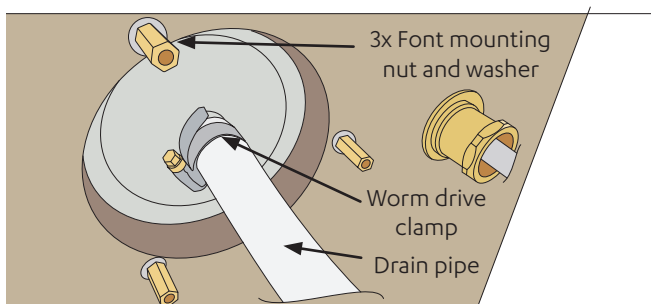


6 Prepare the drainage point




Position upstream of a drain trap.
Drain pipe must have constant fall.
Ensure there are no kinks or sags.

- Locate pipe branch attachment temporarily in position on vertical pipe, upstream from a drain trap.
- Mark spigot hole position, remove attachment & drill out 13mm diameter.
- Apply sealant to spigot groove.
- Ensuring spigot is pointing upwards, snap attachment into place over hole.
- Ensure excess silicone is cleared at drain entry before final hose connection.
- Secure with worm drive clamps.

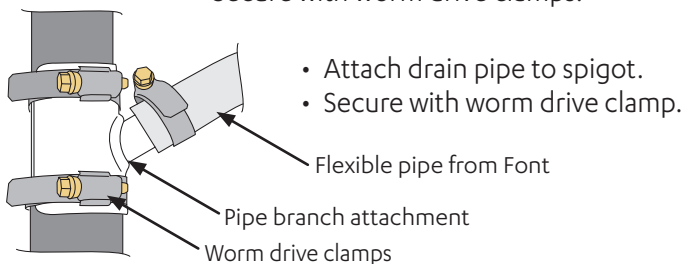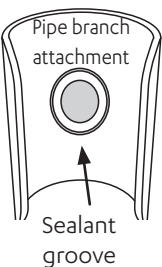

7 Test for leaks

Test for leaks here, re-seal if required.

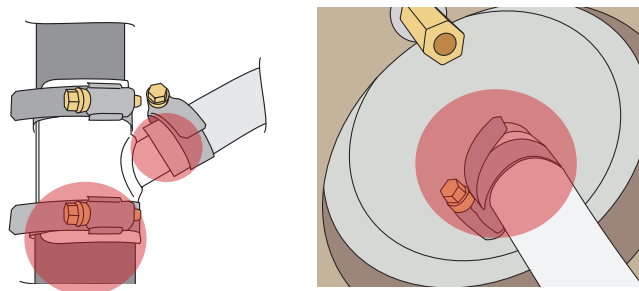

8 Cleaning and general maintenance

Wipe surfaces with a damp cloth and then wipe dry with a clean, dry cloth. Do not use disinfectant sprays without wiping dry afterwards.

Note: If you are experiencing drain-away issues after correct installation, you can consider installing an AAV (Air Admittance Valve) in accordance with your local plumbing code.



Zip Water (Aust) Pty Ltd

ABN 46 000 578 727

67 - 77 Allingham Street, Condell Park, NSW 2200
Postal: Locked Bag 80, Bankstown 1885, Australia
(+612) 9796 3100 | Free Call (Aust): 1800 947 827

www.zipwater.com

Zip Water UK

Trafalgar House
Rash's Green, Dereham,
Norfolk NR19 1JG

0345 6 005 005 | sales@zipindustries.co.uk

specify.zipwater.co.uk


Installation instructions

Zip HydroTap Standalone Font

For Arc, Cube, Classic, Classic Plus, Elite, Elite Plus,
Micro, Touch-Free Wave Taps



Australia

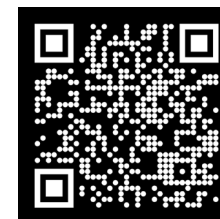

UK

Visit our website to download the manuals

Using these instructions

Please refer to all safety and installation requirements detailed in the installation instructions for the HydroTap Command Centre (supplied with the product and online), prior to installation of, or any change to, the complete system.



WARNING




Read the instructions

Before commencing the installation, download & read the HydroTap installation instructions

Tools needed for Font installation (not supplied)
In addition to normal tools, the following (or equivalent equipment) will be required.

- 35mm diameter hole saw for tap mounting hole.
- 140mm diameter hole saw for Font mounting hole.
- 13mm diameter drill for drainage point.
- 10mm drill for Font mounting stud clearance holes.
- Tube spanner for fixing the Font assembly.




Be aware of the risks of hazards which could cause harm when using tools. Assess the risks before starting the installation.

Parts supplied in the kit


Qty	Description
1	Font body
1	Detachable Font grille
3	Mounting studs
3	Mounting nuts
3	Mounting washers
1	Pipe branch attachment
2	Worm drive clamps for pipe branch attachment
2	Worm drive clamps for flexible drain hose
1	Transparent film template (part no. 806988)
1	Drain hose PVC 19mm ID

1 Positioning




Ensure that Font is positioned to minimise the risks of scalding by dispensing boiling water while using the tap.

- Position Tap and Font using the template provided, See 2.
- Position Command Centre and Tap as close together as possible.

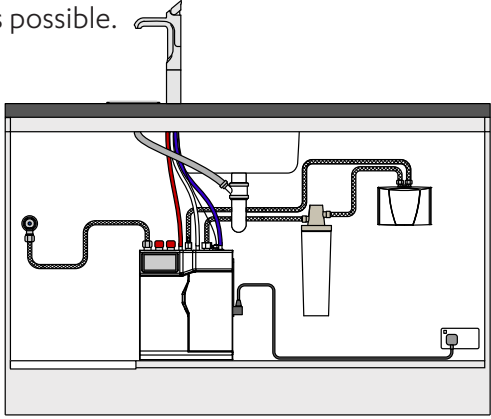


2 Mark out the font position




If mounting the HydroTap at the same time, refer to the installation instructions supplied with the HydroTap for its installation

- Place the transparent film template (supplied) in position on the work surface.
- Mark out the hole positions and centres.

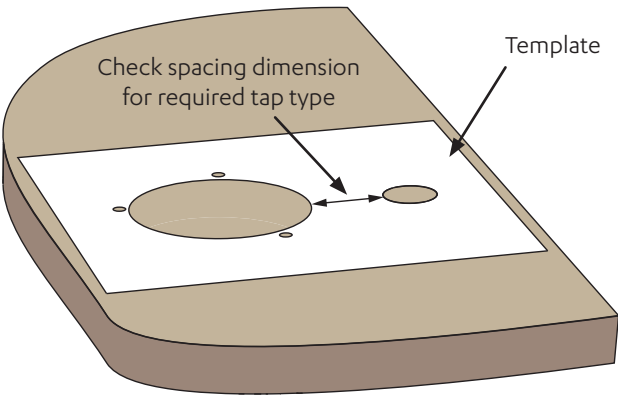

3 Cut the holes

- 140mm diameter clearance for Font bowl.
- 10mm diameter clearance for mounting studs.
- 35mm diameter tap clearance hole.

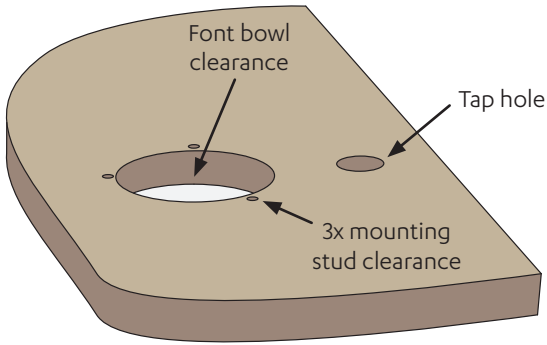

4 Mount the font

- Apply a light coat of silicone sealant to underside of Font rim, to seal to work surface.
- Screw mounting studs into font flange bosses.
- Locate Font & and lightly press into position.
- (Ensure that the HydroTap is positioned such that it dispensed into the centre of the font).

